


USING YOUR REMOTE

Remote Functions

1	POWER	Switches the power on/off for TV and Set Top Box
2	INPUT	Changes the current A/V input of the selected device
3	SETUP	Setup remote (see reverse side of remote)
4	POWER	Turn selected device on or off
5	DEVICE CONTROL	Send commands to DVD, Audio, TV or Set Top Box
6	ON DEMAND	Opens the On Demand menu
7	GUIDE	Displays the on-screen program guide
8	MENU	Displays on-screen menu
9	DAY - / DAY +	Moves Guide 12 hours ahead or back
10	ARROW buttons	Navigates up, down, left and right within the on-screen guide or menus
11	OK	Enter a choice you have made
12	BACK	Goes back to the previous screen
13	EXIT	Exits the current menu item
14	INFO	Displays on-screen information about the current TV / DVR program.
15	LAST	Changes channel to the most recently viewed channel
16	VOL +/-	Increases or decreases volume of the currently selected device
17	CH/PG	Changes channel up/down or goes page up/down on-screen program guide
18	MUTE	Turns the volume of the currently selected device on/off
19	DVR	Opens DVR recordings screen
20	RECORD	Starts recording current program
21	PLAYBACK CONTROL BUTTONS	Controls video for LIVE TV/DVR REPLAY: Plays back a few seconds REW: Rewinds video FF: Fast forwards video SKIP: Skips ahead in 30 second increments PAUSE: Pauses video PLAY: Plays video or resumes from pause STOP: Stops playback of video
22	NUMBER Buttons	Allows direct access to specific channels and menu items
23	DELETE / *	For future use. Currently unassigned
24	ENTER / #	For future use. Currently unassigned
25	PHONE	For future use. Currently unassigned
26	ZOOM	For future use. Currently unassigned
27	LIVE TV	Returns programming to Live TV

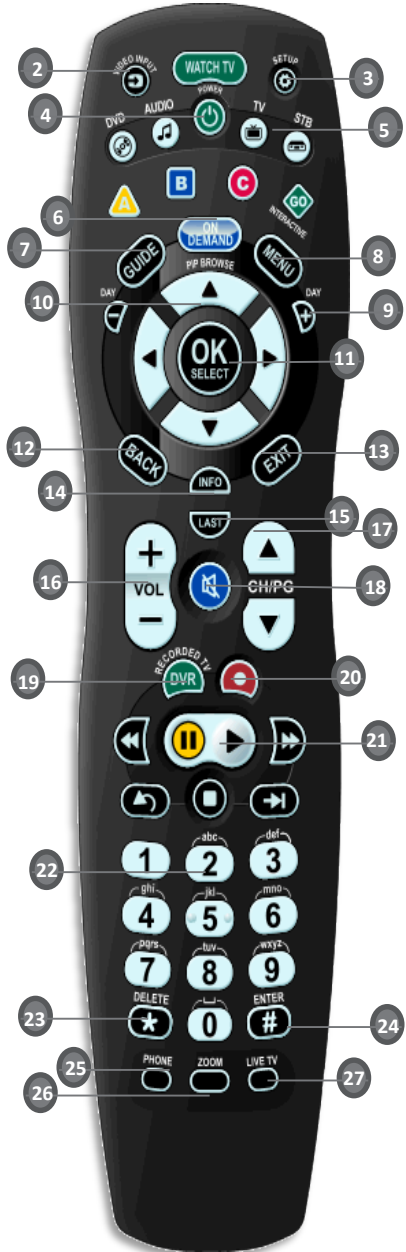

USING YOUR REMOTE

Programming Your Remote



Step 1

- Press and hold SETUP until the device control button blinks twice.

Step 2

- Press the device control button for the device you wish to set up. The device control button will stay lit.

Step 3

- Press and hold the OK button. Release the OK button when your device turns off.

Step 4

- Repeat steps 1-3 for each applicable device (DVD and AUX).

For additional programming information, visit:

>> WWW.URCSUPPORT.COM <<